


1. Open up a browser window (Internet Explorer, Firefox, Safari, etc.). In the Address Bar at the top of the window, delete everything out of this field, and type in "192.168.2.1." A prompt window labeled "Connect to 192.168.21" will appear. Leave the "User name" field blank and enter in your router password in the "Password" field.

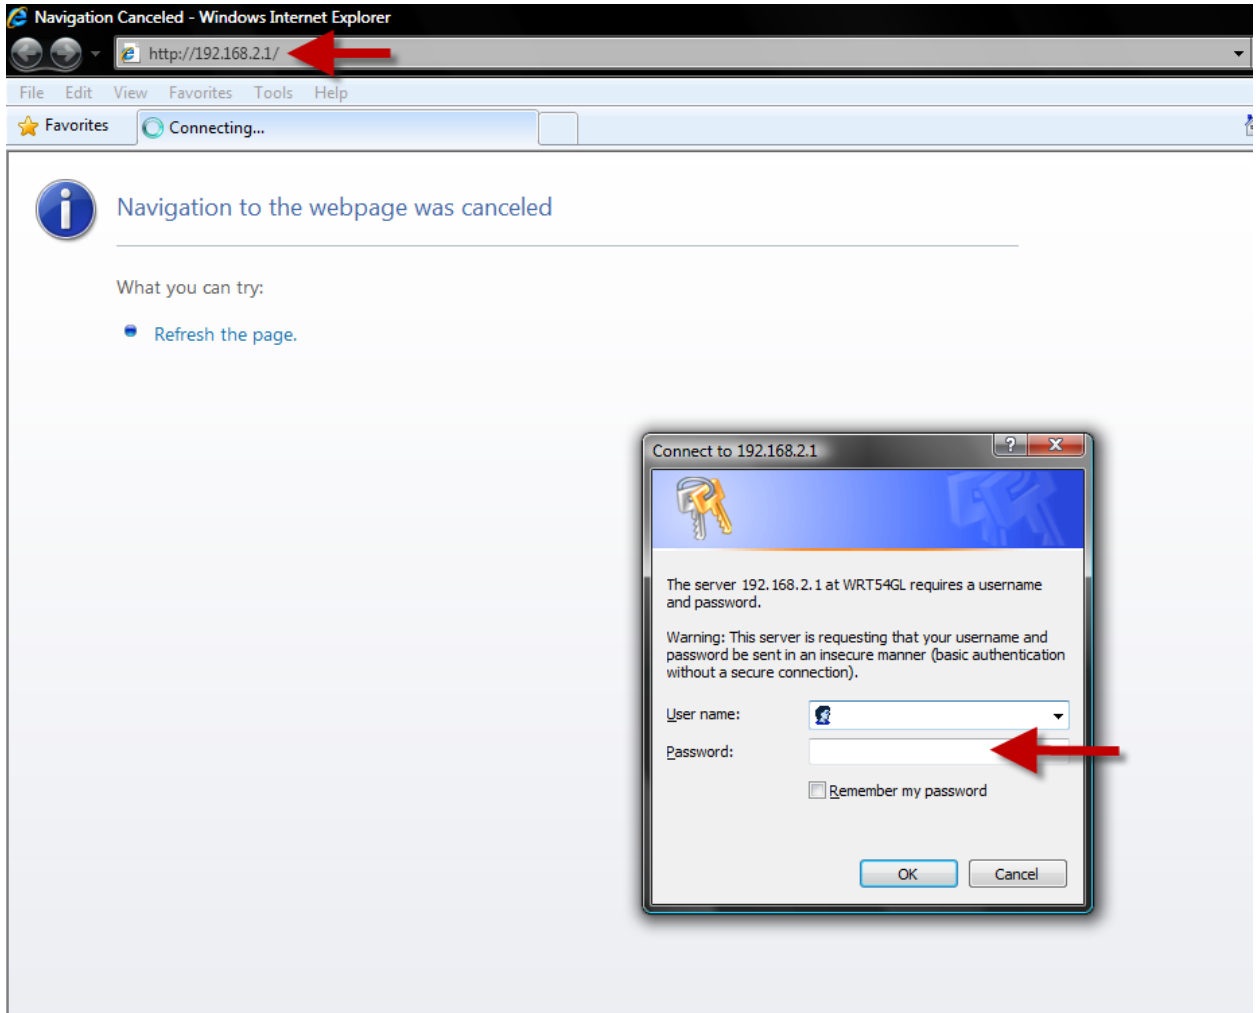

2. A web interface for your Linksys router will now be displayed. To the right of the line labeled “Internet Connection Type”, there will be a drop-down box. If the drop down box is set to “Automatic Configuration DHCP”, you may close the browser window. If the drop down box is set to “Static IP”, locate the fields labeled “Static DNS 1” and “Static DNS 2”. Remove the addresses “206.10.62.4” and “206.10.62.3” from these two fields.

The screenshot shows the Linksys WRT54GL web interface. The top navigation bar includes "Setup", "Wireless", "Security", "Access Restrictions", "Applications & Gaming", "Administration", and "Status". The "Setup" menu is expanded to show "Basic Setup", "DDNS", "MAC Address Clone", and "Advanced Routing". The "Internet Setup" section is active, showing "Internet Connection Type" set to "Static IP". The configuration fields are as follows:

Internet IP Address:	204	73	104	.	
Subnet Mask:	255	255	255	.	0
Gateway:	204	73	104	.	1
Static DNS 1:	206	10	62	.	4
Static DNS 2:	206	10	62	.	3
Static DNS 3:	0	0	0	.	0

Below these fields are "Router Name" (WRT54GL), "Host Name", and "Domain Name" fields. A red arrow points to the "Static DNS 1" field, and another red arrow points to the "Static DNS 2" field, indicating the fields to be modified.

Help text on the right side of the page:

- Static IP : This setting is most commonly used by Business class ISP.
- Internet IP Address : Enter the IP address provided by your ISP.
- Subnet Mask : Enter your subnet mask [More...](#)
- Host Name : Enter the host name provided by your ISP.
- Domain Name : Enter the domain name provided by your

3. In the fields labeled “Static DNS 1” and “Static DNS 2” enter in the addresses “66.242.88.4” and “66.242.89.4” respectively. Scroll to the bottom of this webpage and left-click “Save Changes”. You may now close this window and try viewing webpages.

The screenshot displays the Linksys WRT54GL router's configuration interface. The top navigation bar includes the Linksys logo, the text "A Division of Cisco Systems, Inc.", and the firmware version "v4.30.11". The main navigation menu shows "Setup" as the active tab, with sub-tabs for "Basic Setup", "Wireless", "Security", "Access Restrictions", "Applications & Gaming", "Administration", and "Status". The "Internet Setup" section is expanded, showing the "Internet Connection Type" set to "Static IP". The configuration fields are as follows:

Internet IP Address:	204	73	104	255
Subnet Mask:	255	255	255	0
Gateway:	204	73	104	1
Static DNS 1:	66	242	88	4
Static DNS 2:	66	242	89	4
Static DNS 3:	0	0	0	0

The Router Name field is set to "WRT54GL". On the right side, a help box provides instructions: "Static IP : This setting is most commonly used by Business class ISP.", "Internet IP Address : Enter the IP address provided by your ISP.", "Subnet Mask : Enter your subnet mask More...", and "Host Name : Enter the host".